

SINCE 1897

Northcote

— POTTERY —

WATER FEATURE MANUAL

IRONDALE

60190319

ASSEMBLY INSTRUCTIONS

*Lay out all the components onto a clean, flat and smooth surface.

- 1 Connect the pump (A) to the transformer (FIG.1).
- 2 Place the pump in the largest bowl (C) ensuring the transformer (B) is outside of the bowl (FIG.2).
- 3 Place the bowl cover (D) over the bowl (C) (FIG.3).
- 4 Place the smaller bowl (E) atop the bowl cover (D) (FIG.4).
- 5 Place the smaller bowl cover (F) atop the bowl (E) (FIG.5).
- 6 Thread tubing connected to spout (G) through the hole in plate (F) into the base bowl (FIG.6).
- 7 Fill the bottom bowl with water, ensure the pump is fully submerged and is situated near the base of the bowl.
- 8 Connect the plug to your mains outlet.

*The pressure of the water can be turned up or down using a dial on the pump.

We recommend starting with the regulator fully open and then adjusting down if required. Use the black plastic chocs provided to adjust waterfall as required (FIG.8).

FIG.1

 


FIG.2



FIG.3

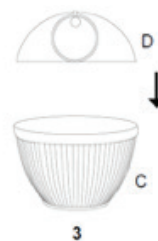


FIG.4

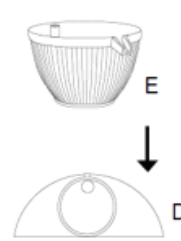


FIG.5

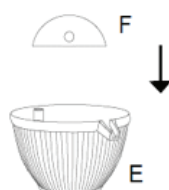



FIG.6



FIG.7



FIG.8

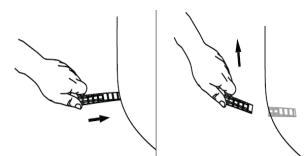

SINCE 1897

Northcote

— POTTERY —

WARRANTY INFORMATION

WARNING - IMPORTANT NOTICE

- **Always ensure the pump is fully submersed when in use. Never allow the pump to run dry, as this will cause irreparable damage and invalidate the warranty.**
- Change and top-up the water on a regular basis. Always use clean fresh water, do not use heavily chlorinated water, heated liquids or water with high PH levels. If fountain is not in use for an extended period of time, unplug the pump, and drain the fountain completely.
- Always disconnect from power before commencing any maintenance or cleaning of the pump/fountain.
- Do not operate if the pump, cable or transformer is damaged in any way. If in doubt about any electrical connections, please consult a qualified electrician.
- Do not exceed the voltage shown on the pump. Only use the transformer provided, and ensure that it is plugged into a power socket that is in a sheltered area out of the rain. Do not allow the plug or power socket to get wet.
- Don't place the fountain in a location where any water splashing or spills will reach any other electrical equipment or cause damage. Do not attempt to move the fountain when filled with water.
- Disconnect the power cord from the outlet by holding the plug, not by pulling the cord. Do not lift the pump by the cord.
- Always supervise children and pets around the fountain.

WINTER CARE

During winter, never allow ice to form in the fountain, as it may cause damage. Do not operate below 5 ° C. Drain the fountain completely and store away from freezing temperatures and protect from frost.

CLEANING THE PUMP

To clean the pump, first disconnect it from the power supply and remove it from the water feature, then:

- Remove the inlet cover from the front of the pump, and gently grip the impeller to pull out the rotor assembly.
- Clean the rotor and rotor housing with water, then dry with paper towel.
- Reassemble the parts and store the pump in a dry area.

TROUBLESHOOTING

If water doesn't flow evenly over the fountain:

- Ensure the water feature is sitting on level ground to ensure even water flow.
- Adjust the pump's flow control switch. Set the flow control to maximum (+) before operating. Once flow is established the switch can be adjusted downward to the desired level.

If the pump fails to operate, check the following:

- Check that power is correctly connected, and that the pump is fully submerged.
- Check the pump and tubing for any obstructions or kinks.
- If the pump operates, and there are no obstructions/kinks in the tubing, and the pump is fully submerged, but there is no flow remove the tubing and clean the inside. Then place the pump back into the water and turn it on, and once the water begins to flow, re-attach the tubing.
- Remove the cover with the flow adjuster on it, and gently lever off the inner cover to reveal the pump impeller. Gently turn the rotor to check that it is not broken or jammed.

If the pump runs slower water circulation, check the following:

- The flow control switch on the body of the pump. Adjust if necessary.
- Ensure the pump is completely submersed.

If any abnormal sound is heard during the operation, turn off the power supply and check the rotor assembly as follows:

- Remove the pump cover and rotor plate from the front.
- Grip the impeller and gently take out the rotor assembly.
- Rinse the rotor assembly and housing with clean water in order to remove any debris.
- If any breakage or surface damage is found on the rotor assembly, please contact your supplier.

We hope you continue to enjoy your water feature for many years. Over time the finish may gradually mellow in colour, this is part of the natural weathering process.

WARRANTY

*AMES will provide a 12 month repair/replacement warranty from the date of purchase. Warranty is subjected to this item being operated in accordance with its specifications. Our goods come with guarantees that cannot be excluded under the Australia consumer law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AMES Australasia Pty Ltd ABN 89 169 427 061
Level 1, 660 Doncaster Road, Doncaster, Victoria 3108. Australia
www.northcotepottery.com @northcotepottery.com
T: +613 9464 2733
F: +613 9706 5529