

PARCEL LETTERBOX

INSTALLATION

INSTRUCTIONS



Requirements:

Additional items required for installation of your Parcel Letterbox.

- Concrete paver (large enough to fit the base of your letterbox)
- Sand
- Spade
- Spirit level
- Screwdriver
- Spanner
- Drill
- Marker

Assembly Instructions:

Use a paver to create a solid, level site to fasten your letterbox to with explosion screws (included) by following the 6 steps below.

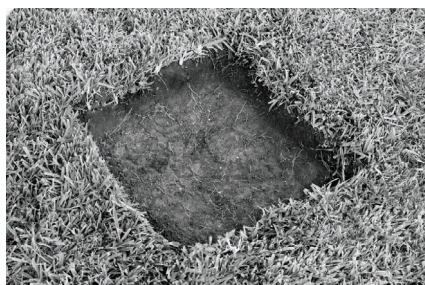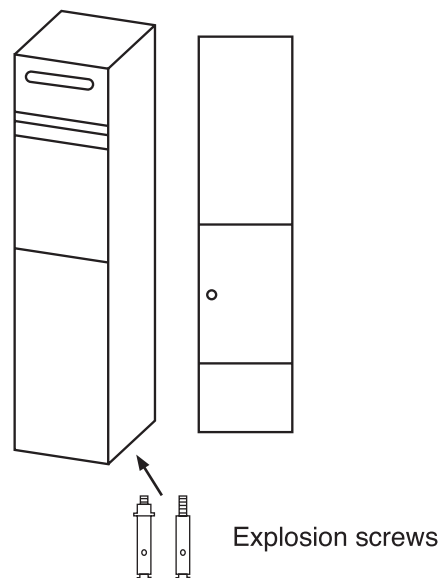

1. Prepare a level and firm site large enough to fit the width and depth of the paver. Use a spade to remove any lawn or other growth.
2. Pour sand into the hole to help with levelling and smooth it out.
3. Open rear door and locate predrilled holes in the base.
4. Use a marker to record hole distance and required position of the drill holes on the paver.
5. Predrill hole for the explosion screws.
6. Attach letterbox with explosion screws provided to the paver, fastening the nuts as tightly as possible.