



CALOUNDRA LETTERBOX

INSTALLATION INSTRUCTIONS

Assembly Instructions:

1. Place the metal letter compartment (A) through the front of the WPC frame (B).
2. Use the 6 screws (provided) to attach the metal letter compartment (A) to the WPC frame (B). Holes have been predrilled into the WPC, complete the fastening with a screwdriver.
3. Remove the pre-attached bolts from the front panel (C) and attach to the metal letter compartment (A).

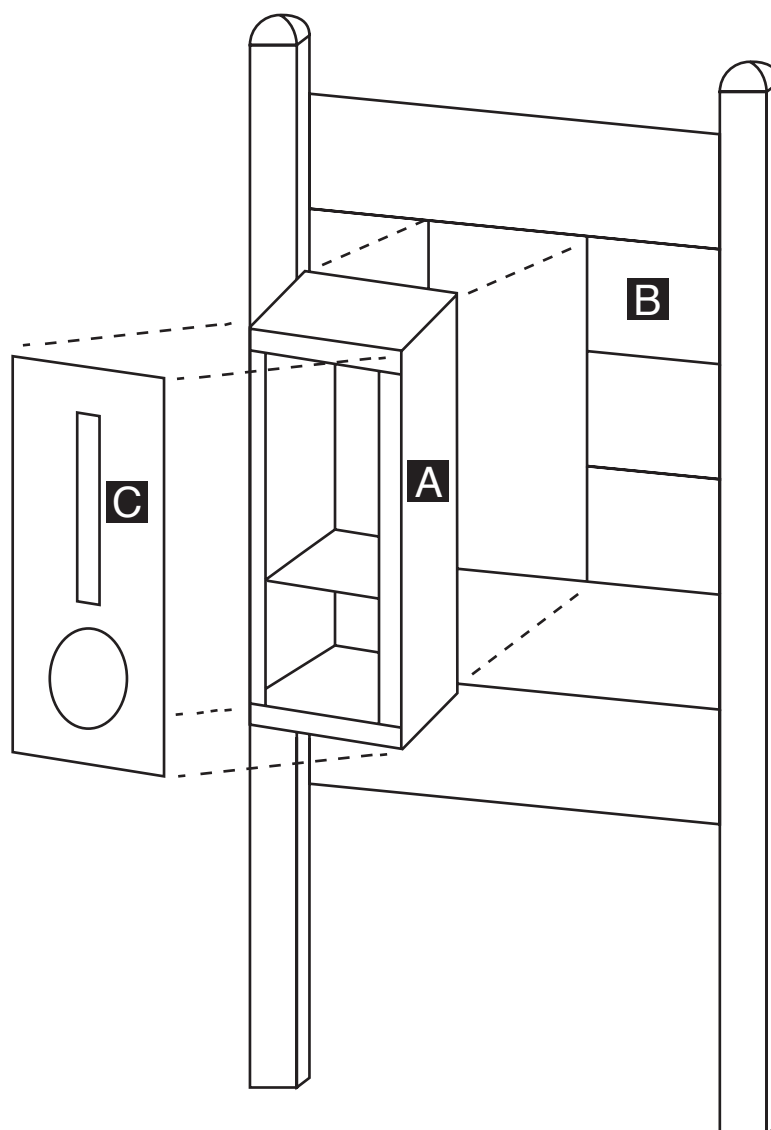

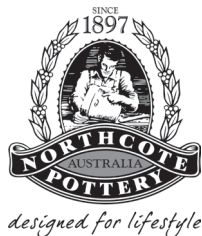

CALOUNDRA LETTERBOX

INSTALLATION INSTRUCTIONS

Concreting your letterbox into the ground:

1. Inside the base of each letterbox post is an anchor post, which is bolted to the inside of the frame.
2. Undo each bolt, and turn the anchor posts around so both the anchor posts are sticking out at the base of each post frame, then re-attach the bolts.
3. Measure the space between the anchor posts, and dig two holes at the desired location to match the spacing.
4. Place the anchor posts into the holes, positioning the letterbox frame so it is square and level, then pour concrete into the holes.
5. Once the concrete holes have set, your letterbox is ready to use.

Please note: Before concreting, ensure the anchor posts are attached to the timber frame - do not attempt to concrete the anchor posts by themselves. Try to avoid concreting the letterbox frame into the ground, it is preferable that only the anchor posts go into the concrete.

